


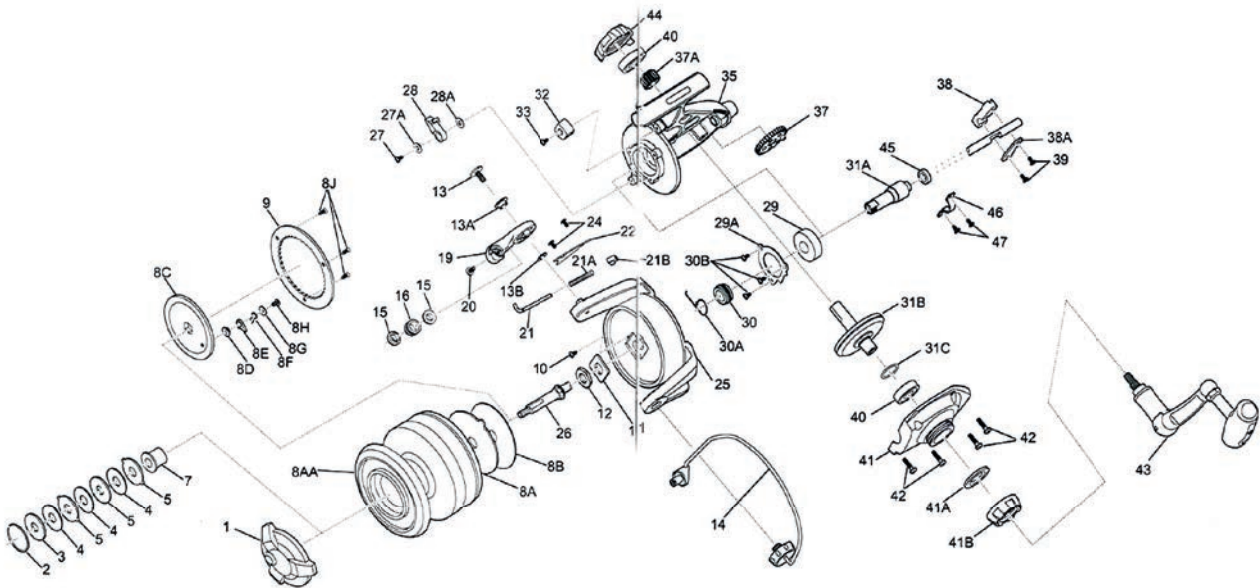

BLACK CAT EXTREME 495 FD

KEY NO	DESCRIPTION	495
1	DRAW KNOB ASSEMBLY	KT332-01
8	SPOOL ASSEMBLY KIT	LT4321-01
2	RETAINER - SPOOL - TOP	KT038-01
3	DRAG WASHER - KEYED - SHAFT	KT080-01
4	DRAG FRICTION WASHER	KT030-01
5	DRAG WASHER - KEYED - SPOOL	KT081-01
7	SPOOL SLEEVE	KT160-01
8AA	SPOOL	LT021-01
8A	DRAG WASHER, KEYED-SPOOL (REAR)	KT081-02
8B	DRAG FRICTION WASHER (REAR)	KT080-02
8C	DRAG WASHER, KEYED-SHAFT (REAR)	KT039-01
8D	BUSHING - CLICKER	HT224-01
8E	SPOOL CLICKER	HT103-01
8F	CLICK SPRING	HT068-01
8G	CLICKER WASHER	KT076-01
8H	SCREW - CLICKER	KT085-01
8J	SCREW-RETAINER-DRAG (REAR)	KT228-01
9	SPOOL RETAINER - BOTTOM	KT225-01
10	ROTOR NUT LOCK SCREW	KT113-01
11	ROTOR WASHER	KT065-01
12	ROTOR NUT	KT006-01
13	SCREW - BAIL ARM	KT051-01
13A	BUSHING - BAIL ARM	KT227-01
13B	WASHER - BAIL ARM	KT229-01
14	BAIL ASSEMBLY	KT347-01
15	BUSHING - LINE ROLLER	KT202-01
16	LINE ROLLER	KT004-01
19	BAIL ARM	KT007-01
20	SCREW - LINE SLIDER	KT106-01
21	SPRING SHAFT	KT031-01
21A	BAIL ARM SPRING	KT044-01
21B	SPRING HOLDER	KT020-01
22	ROTOR COVER	KT087-01
24	SCREW - ROTOR COVER	KT085-01

KEY NO	DESCRIPTION	495
25	ROTOR	KT00
26	CENTER SHAFT ASSEMBLY	KT31
27	SCREW AR PAWL	KT11
27A	ANTI - REVERSE PAWL RETAINER	KT09
28	ANTI - REVERSE PAWL	KT06
28A	WASHER - ANTI - REVERSE PAWL	KT10
29	PINION BEARING	KT02
29A	RETAINER PLATE	KT11
30	ANTI - REVERSE SPRING SPACER	KT09
30A	ANTI - REVERSE ACTUATOR SPRING	KT08
30B	SCREW RETAINER PLATE	KT11
31	GEAR KIT	KT40
31A	PINION	KT01
31B	CRANK GEAR ASSEMBLY	KT31
31C	GEAR ADJUST WASHER	KT10
32	BAIL TRIP	LT01
33	SCREW - BAIL TRIP	KT08
35	BODY ASSEMBLY	LT30
37	O/S GEAR	KT05
37A	SPUR GEAR	KT05
38	O/S SLIDER	KT02
38A	O/S SLIDER RETAINER	KT07
39	MAIN SHAFT SCREW	KT11
40	BALL BEARING	KT15
41	SIDE PLATE	KT02
41A	SEAL - CRANK	KT13
41B	COLLAR - CRANK	KT22
42	SIDE PLATE SCREW	KT05
43	CRANK HANDLE ASSEMBLY	KT31
44	BEARING CAP	KT07
45	PINION BEARING	KT14
46	BEARING RETAINER	KT04
47	SCREW RETAINER	KT11
48		