



# QUANTUM ENERGY LIGHT LSW 620/630

KEY NO.	PART NAME
1	PUSH BUTTON SPOOL ASS'Y
2	MAIN SHAFT PIN
3	MAIN SHAFT
4	SCREW
5	WASHER
6	PICK UP HOUSING NUT
7	BAIL WIRE ASS'Y
8	LINE ROLLER WASHER
9	BUSHING
10	LINE ROLLER
11	LINE ROLLER WASHER
12	LINE ROLLER WASHER
13	BAIL BRACKET
14	SCREW
15	SCREW
16	SCREW
17	TRIP PISTON
18	TRIP SPRING
19	TRIP SPRING HOLDER
20	TRIP PLUNGER
21	BAIL ARM COVER
22	SCREW
23	ROTOR FRONT RING
24	PICK UP HOUSING
25	SCREW
26	SPACER
27	SCREW
28	BEARING SLEEVE
29	BALL BEARING
30	BEARING RETAINER
31	SCREW
32	SPACER
33	WASHER
34	ONE WAY CLUTCH ASS'Y
35	SPACER
36	BALL BEARING
37	PINION
38	LOCK WASHER
39	N-R PAWL
40	N-R PAWL STUD
41	N-R SPRING
42	O-RING

43	N-R STEM SPRING
44	N-R STEM
45	N-E LEVER
46	N-R SCREW
47	FRAME
48	HANDLE SCREW
49	HANDLE WASHER
50	REEL COVER
51	SCREW
52	BUSHING
53	BUSHING
54	DRIVE GEAR
55	DRIVE GEAR WASHER
56	BALL BEARING
57	BUSHING
58	SEAL RING
59	COVER PLATE
60	SCREW
61	SCREW
62	SCREW
63	CRANK ASS'Y
64	LEVER WIND BRACKET RETAINER
65	SCREW
66	LOCK WASHER
67	WORM SHAFT GEAR
68	BALL BEARING
69	WORM SHAFT
70	BALL BEARING
71	WORM SHAFT FRONT RETAINER
72	SCREW
73	WORM SHAFT REAR RETAINER
74	SCREW
75	LEVEL WIND BKT
76	BUSHING
77	LOCK WASHER
78	SCREW
79	SCREW HOLDER
80	HOLDER SLEEVE
81	MAIN SHAFT HOLDER
82	SCREW
83	MAIN SHAFT PIN
84	WASHER
85	TRANSFER GEAR
86	TRANSFER PINION

QUANTUM ENERGY LIGHT LSW 620/630