


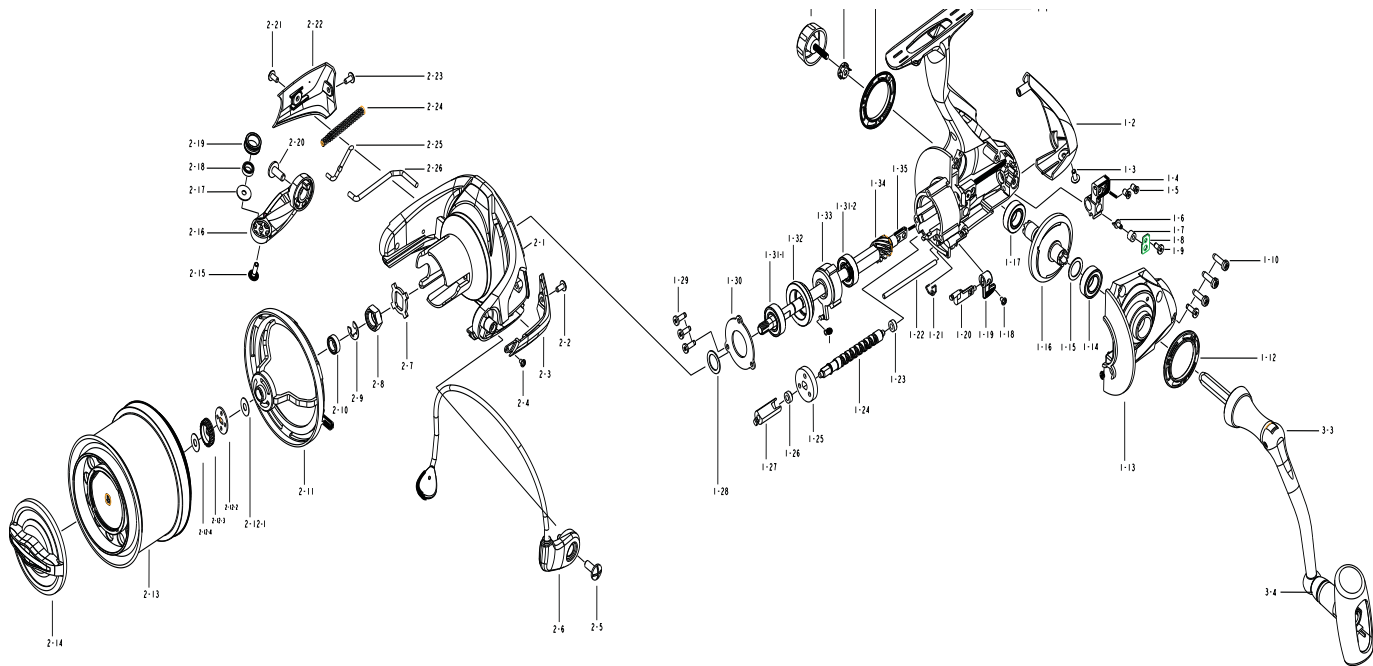

BROWNING FORCE XTREME FEEDER 6000

No.: PARTS NAME:

1-1. MAIN BODY
 1-2. BODY COVER
 1-3. SCREW
 1-4. SLIDER
 1-5. SCREW
 1-6. LINE GUIDE PIN
 1-7. BUSHING
 1-8. LINE GUIDE PIN COVER
 1-9. SCREW
 1-10. SCREW
 1-12. BODY COVER
 1-13. MAIN COVER
 1-14. BALL BEARING
 1-15. WASHER
 1-16. MAIN GEAR
 1-17. BALL BEARING
 1-18. SCREW
 1-19. ANTI-REVERSE BUTTON
 1-20. ANTI-REVERSE LEVER
 1-21. SPRING
 1-22. OSSCILATING SLIDER PIN
 1-23. COPPER BUSH
 1-24. WORM SHAFT

No.: PARTS NAME:

1-25. DRIVE GEAR
 1-26. COPPER BUSH
 1-27. WORM SHAFT COLLAR
 1-28. WASHER
 1-29. SCREW
 1-30. OWC COVER
 1-31-1. BALL BEARING
 1-31-2. BALL BEARING
 1-32. BUSHING
 1-33. ONE WAY CLUTCH
 1-34. PINION GEAR
 1-35. MAIN SHAFT
 1-37. BODY COVER
 2-1. ROTOR
 2-2. SCREW
 2-3. ROTOR COVER
 2-4. SCREW
 2-5. SCREW
 2-6. BAIL ARM
 2-7. FIX COVER
 2-8. ROTOR NUT
 2-9. RETAINING RING
 2-10. BALL BEARING

No.: PARTS NAME:

2-11. LINE GUARD
 2-12-1. WASHER
 2-12-2. FIX WASHER
 2-12-3. CLICK SEAT
 2-12-4. WASHER
 2-13. SPOOL ASSEMBLY
 2-14. DRAG BUTTON ASSEMBLY
 2-15. SCREW
 2-16. BAIL ARM
 2-17. WASHER
 2-18. BALL BEARING
 2-19. LINE ROLLER
 2-20. SCREW
 2-21. SCREW
 2-22. ROTOR COVER
 2-23. SCREW
 2-24. SPRING
 2-25. BAIL TRIP SHAFT
 2-26. BAIL TRIP SHAFT
 3-1. HANDLE COVER
 3-2. WASHER
 3-3. HANDLE ASSEMBLY