



## RHINO TR 410 RH LC

Key No.	Description	Key No.	Description	Key No.	Description	Key No.	Description
1	CLICK BUTTON	21	LINE GUIDE ASSY	41	C-CLIP	61	WASHER
2	SCREW	22	WASHER	42	WASHER	62	SPRING WASHER
3	LEFT SIDE PLATE	23	LINE GUIDE PAWL	43	MAIN GEAR	63	STAR CLICK RETAINER
4	CLICK TONGE	24	WASHER	44	DRAG WASHER	64	SPRING
5	E-CLIP	25	LINE GUIDE NUT	45	KEY WASHER	65	STAR DRAG
6	IDLER GEAR	26	LINE GUIDE SHAFT	46	EAR WASHER	66	HANDLE ASSY
7	CLIP	27	FRAME	47	KEY WASHER	67	HANDLE NUT
8	SCREW	28	E-CLIP	48	ONE WAY CLUTCH ASSY	68	LOCKING COVER
9	CLICK SPRING	29	SCREW	49	SPRING	69	SCREW
10	BUSHING	30	BRIDGE ASSY	50	ECCENTRIC CAM	70	SCREW
11	WASHER	31	PAWL PIN	51	SPRING	71	GEAR
12	C-CLIP	32	PAWL	52	RIGHT SIDE PLATE	72	WASHER
13	CLICK RATCHET	33	ECCENTRIC JACK	53	WASHER	73	COUNTER WHEEL ASSY
14	SPOOL ASSY	34	RIVET	54	ECCENTRIC LEVER	74	WINDOW
15	BALL BEARING	35	PINION YOKE	55	SCREW	75	LINE COUNER COVER
16	E-CLIP	36	PINION YOKE SPRING	56	SPOOL TENSION CLICK SPRING	76	SCREW
17	L.C.IDLER GEAR	37	PINION GEAR	57	WASHER	77	RETAINER
18	BUSHING	38	WASHER	58	WASHER	78	SPRING
19	WORM SHIELD	39	MAIN GEAR SHAFT	59	SPOOL TENSION KNOB	79	RATCHET
20	WORM SHAFT ASSY	40	RATCHET	60	BALL BEARING		